

# **WESTON**

## **Montage- und Betriebsanleitung Assembly Instruction**



## DE Bestimmungsgemäßer Gebrauch

Dieser Grill ist nur für den Gebrauch durch den Endverbraucher vorgesehen.

- **ACHTUNG! Dieses Grillgerät wird sehr heiß und darf während des Betriebes nicht bewegt werden.**
- **Nicht in geschlossenen Räumen nutzen!**
- **ACHTUNG! Zum Anzünden oder Wiederanzünden keinen Spiritus oder Benzin verwenden! Nur Anzündhilfen entsprechend EN 1860-3 verwenden!**
- **ACHTUNG! Kinder und Haustiere fernhalten.**

Der Grill sollte aufgeheizt werden und die Holzkohle/Briketts für mindestens 30 Minuten durchglühen, bevor Sie mit dem Grillen beginnen.

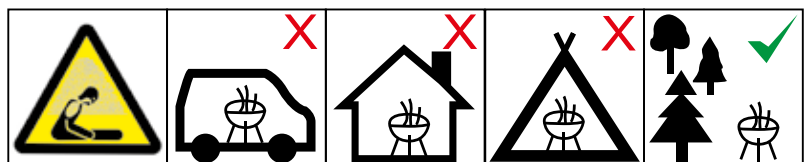 
### **WARNUNG! – Allgemeine Sicherheitsregeln – Lesen Sie bitte alle Anweisungen.**

Die Nichteinhaltung aller Anweisungen, die nachstehend aufgelistet sind, kann zu Bränden und/oder schweren Verletzungen führen.

1. Dieser Grill wurde speziell für den ausschließlichen Gebrauch im Freien entworfen. Der Gebrauch in geschlossenen Räumen führt zu einer Ansammlung von giftigem Rauch, die zu schwerer Körperverletzung oder zum Tod führen kann. Benutzen Sie diesen Grill niemals in geschlossenen Räumen, selbst dann nicht, wenn eine Durchlüftung vorhanden ist.
  2. Achten Sie bei der Verwendung von Flüssiganzündern darauf, dass keinerlei Flüssigkeit durch die unteren Lüftungsöffnungen ausgetreten ist. Verwenden Sie niemals Flüssiganzünder auf heißer oder warmer Kohle.
  3. Benutzen Sie niemals Benzin, Kerosin oder andere hochentzündliche Flüssigkeiten zum Anzünden. Diese können explodieren.
  4. Sorgen Sie dafür, dass Kinder und Haustiere dem Grillbereich fernbleiben.
  5. Halten Sie bei der Benutzung des Grills einen Sicherheitsabstand von mindestens 1,50 Metern zu jeglichen brennbaren Materialien ein. Zu brennbaren Materialien zählen unter anderem Holz, Terrassen aus behandeltem Holz, Veranden und Vordächer.
  6. Benutzen Sie den Grill erst dann, wenn alle Teile an Ort und Stelle sind.
  7. Lassen Sie Kohlen vollständig verbrennen und die Asche mindestens 48 Stunden abkühlen, bevor Sie sie entsorgen.
  8. Tragen Sie keine weite Kleidung, während Sie den Grill anzünden oder benutzen.
  9. Benutzen Sie den Grill nicht bei starkem Wind.
  10. Stellen Sie sicher, dass der Grill auf ebenem Untergrund und stabil steht, bevor Sie ihn benutzen.
  11. Tragen Sie beim Zubereiten von Speisen, Einstellen der Lüftungsöffnungen und Platzieren von Holzkohle immer Grillhandschuhe gemäß den Angaben in gemäß der PSA-Verordnung (Kategorie II in Bezug auf Hitzeschutz, z. B. DIN-EN 407).
- 12. Warnung:** Bewegen Sie das Gerät nicht, während Sie es benutzen. Lassen Sie es vollständig abkühlen, bevor Sie es bewegen oder lagern.

### **Die Bedienung Ihres Grills**

1. Bilden Sie bei der Verwendung von Holzkohlebriketts oder Holzscheiten eine Pyramide und übergießen Sie die Briketts/Scheite mit Flüssiganzünder. Empfohlene maximale Anzahl an Holzkohlebriketts: 30 Stück. Max Holzkohle-Gewicht. Warten Sie, bis der Flüssiganzünder eingesickert ist, bevor Sie anzünden. Flüssiganzünder muss sofort nach dem Gebrauch wieder verschlossen und in sicherer Entfernung vom Grill aufbewahrt werden. Benutzen Sie nur Briketts, die die Norm EN 1860-2 erfüllen.
2. Vergewissern Sie sich, dass die Kohlschale nicht mit Holzkohle oder Briketten überfüllt ist. Benutzen Sie den Grill nicht ohne angebrachte Kohlschale. Der Grill darf nicht angezündet werden, falls die Holzkohle oder Briketts in die Feuerschale fallen. Siehe Abbildung unten.
3. Nicht anzünden, wenn Holzkohle oder Briketts in die Feuerschale gelangen.
4. Wenn Sie die Abdeckung während des Grillens entfernen, heben Sie sie zur Seite hin ab und nicht gerade nach oben. Wenn Sie sie gerade nach oben abheben, können Luftwirbel entstehen, die Asche auf das Grillgut wehen.
5. Nicht kochen, bevor der Brennstoff eine Aschebeschichtung aufweist.



"Verwenden Sie den Grill nicht in engen und / oder bewohnbaren Räumen, z. Häuser, Zelte, Wohnwagen, Wohnmobile, Boote. Lebensgefahr durch Kohlenmonoxidvergiftung."

## Intended use

This barbecue is intended for consumer use only.

- **WARNING! This barbecue will become very hot, do not move it during operation.**
- **Do not use indoors!**
- **WARNING! Do not use spirit or petrol for lighting or re-lighting! Use only firelighters complying to EN 1860-3!**
- **WARNING! Keep children and pets away.**

The barbecue should be heated up and the charcoal should be red hot for at least 30 minutes prior to the first cooking.

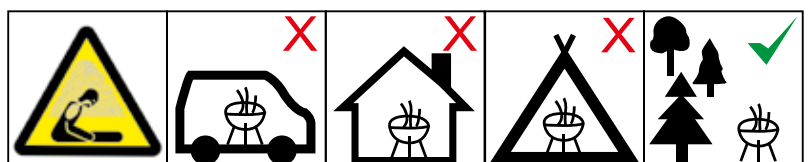 
### **Warning! - General safety rules - Read all instructions.**

Failure to follow all instructions listed below may result in fire and/or serious injury.

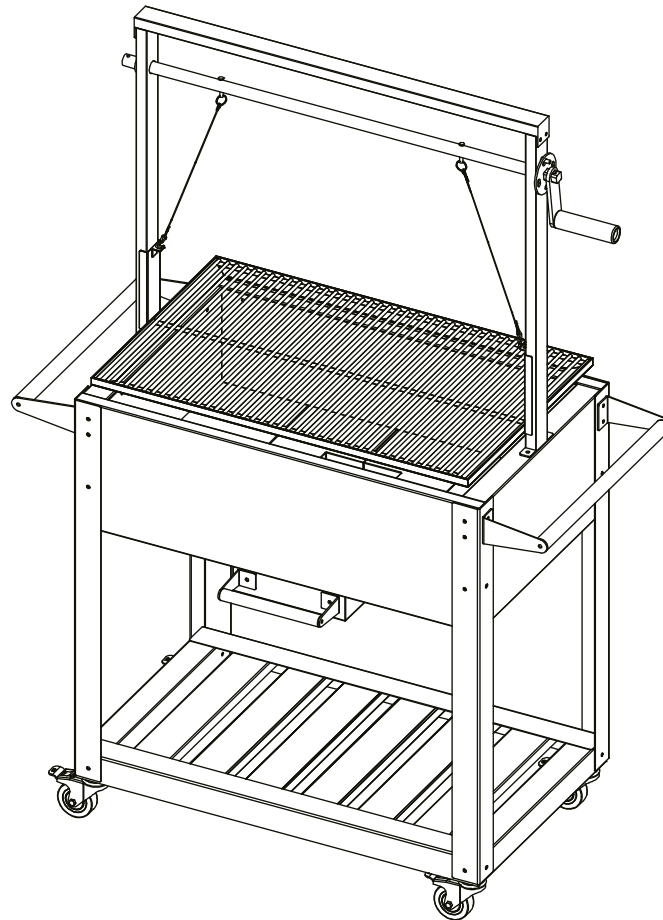 
1. This barbecue is specifically designed for outdoor use only. Indoor use will allow toxic fumes to accumulate which can cause serious bodily harm or death. Never use this barbecue indoors, even if ventilation is provided.
2. When using lighter fluid beware of any fluid that may have drained through the bottom vents. Never add lighter fluid to existing hot or warm coals.
3. Never use gasoline, or kerosene or other highly volatile fluids as a starter, they can explode.
4. Keep children and pets well away from the barbecue area.
5. Do not use barbecue within five feet of any combustible materials. Combustible materials include, but are not limited to wood or treated wood decks, patios and porches.
6. Do not use barbecue unless all parts are in place.
7. Allow coals to burn out completely and let the ashes cool for at least 48 hours before disposing of them.
8. Do not wear loose clothing while lighting or using the barbecue.
9. Do not use barbecue in high winds.
10. Make sure that the barbecue is level and steady prior to use.
11. "When preparing food, adjusting the vents, placing charcoal always wear barbecue mitts which specified in accordance with the PSA regulation (Category II with respect to heat protection, e.g. DIN-EN 407)."
12. **WARNING:** Do not move the appliance when in use. Allow it to cool completely before moving or storing.

### **Operating your barbecue**

1. Remove the lid before building the fire. Make sure air vent at bottom is closed.  
Note: For proper airflow, remove accumulated ashes from the bottom of the barbecue if present (only after the coals are fully extinguished). Charcoal requires oxygen to burn, so be sure nothing clogs the vents.
2. When using charcoal briquettes or lumpwood charcoal form a pyramid and douse the briquettes/charcoal with lighter fluid. Recommended maximum amount of charcoal briquettes: 30 pieces. Max charcoal weight : 1.6kg Wait until the fluid has soaked in before lighting. Lighter fluid should be capped immediately after use and placed a safe distance from the grill. Use only briquettes complying to EN 1860-2
3. Do not light if the charcoal or briquettes spill into the fire bowl.
4. Once coals are covered with a light grey ash (usually 25 to 30 minutes), spread the coals with long handled tongs.
5. When removing the barbecue lid during cooking, lift to the side, rather than straight up. Lifting straight up may create suction, drawing ashes up onto your food.
6. Do not cook before the fuel has a coating of ash.



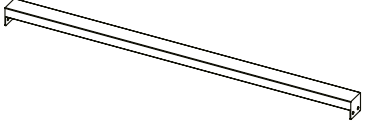 
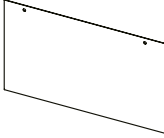 
 
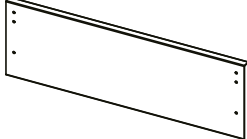 
 
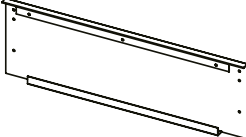 
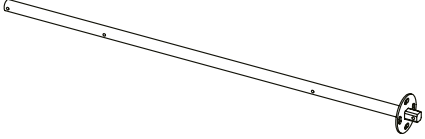 
 

 

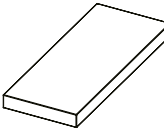 
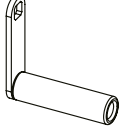 
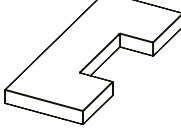 
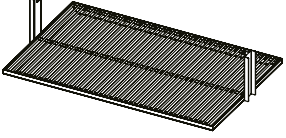 
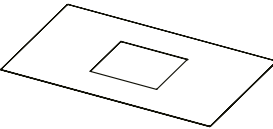 
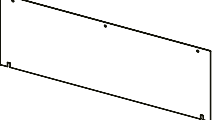 
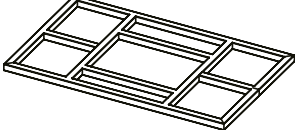 
"Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality."


























**Outdoor grill**





FOR OUTDOOR USE ONLY. PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY.  
RETAIN THIS MANUAL FOR FUTURE REFERENCE.

## Parts list

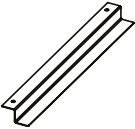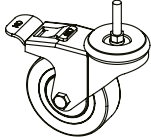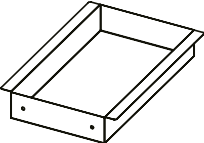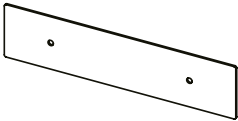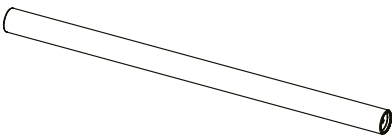               
 
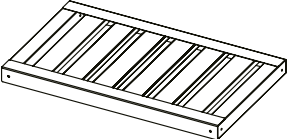 
No.	Description	Qty	No.	Description	Qty
1	Upper support tube 	1	10	Side insulation board 	2
2	Side support tube with bracket 	1	11	Front plate of grill body 	1
3	Side support tube no bracket 	1	12	Back plate of grill body 	1
4	Cooking grill axle 	1	13	Side plate of grill body 	2
5	Line hook 	2	14	Charcoal grate 	1
6	Ring 	2	15	Side insulation block 	2
7	Cooking grill axle handle 	1	16	Middle insulation block 	2
8	Cooking grill 	1	17	Bottom insulation board 	1
9	Long insulation board 	2	18	Bottom support tube frame 	1





No.	Description	Qty	No.	Description	Qty
19	Ash catcher support 	2	28	Wheel 	4
20	Ash catcher 	1	A	Screw M5 x 10 	22
21	Ash catcher handle bracket 	2	B	Screw M6 x 12 	30
22	Ash catcher handle 	1	C	Screw M6 x 25 	6
23	Ash catcher plate 	1	D	Nut M6 	22
24	Side handle bracket 	4	E	Plated washer 	20
25	Side handle 	2	F	Pin 	2
26	Leg 	4	G	Cotter pin 	2
27	Bottom shelf 	1			

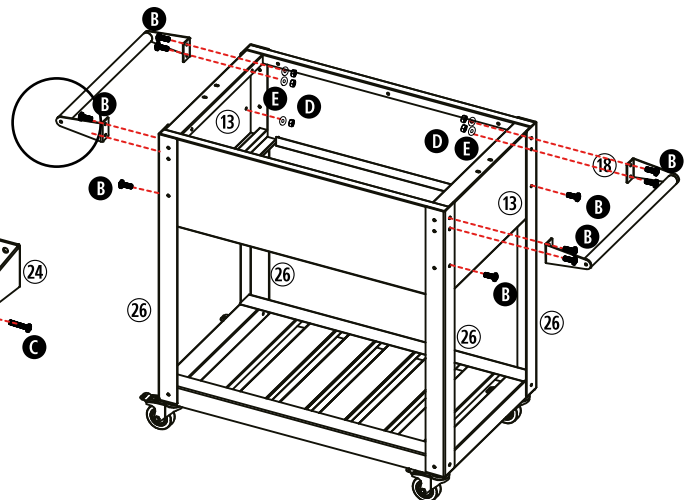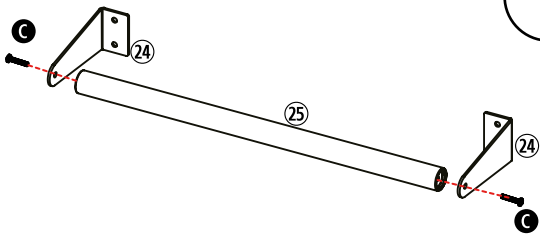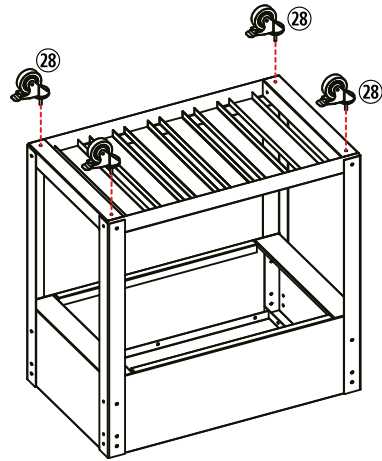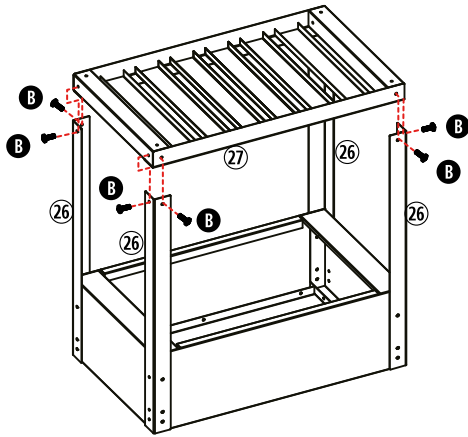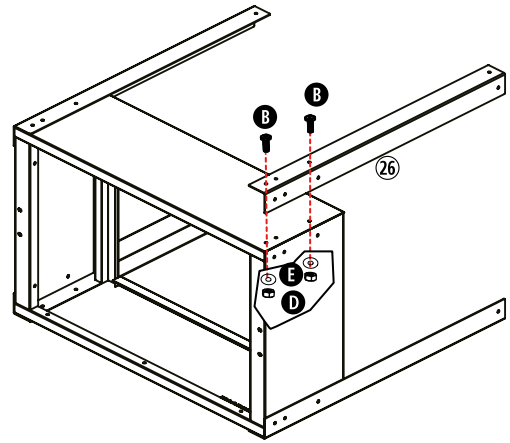     
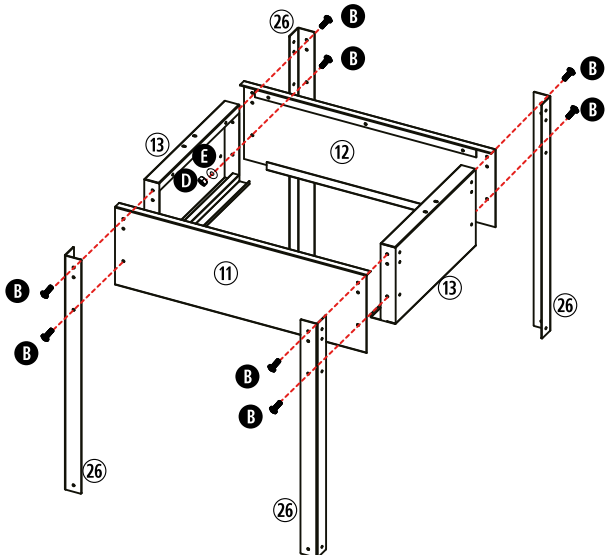 


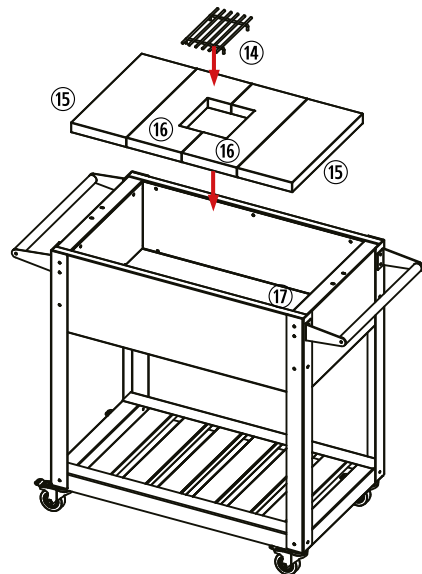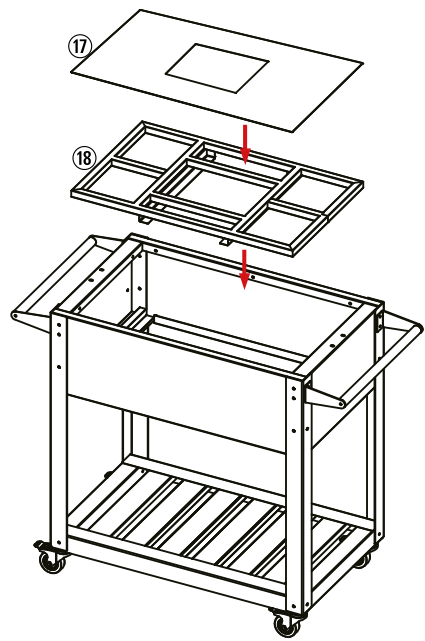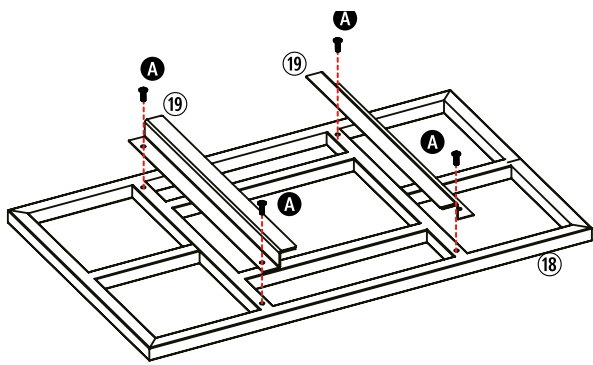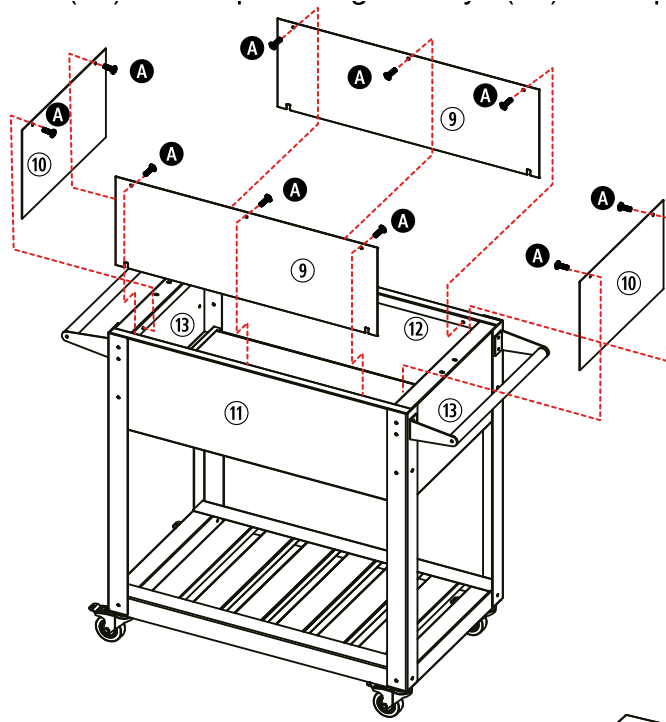    



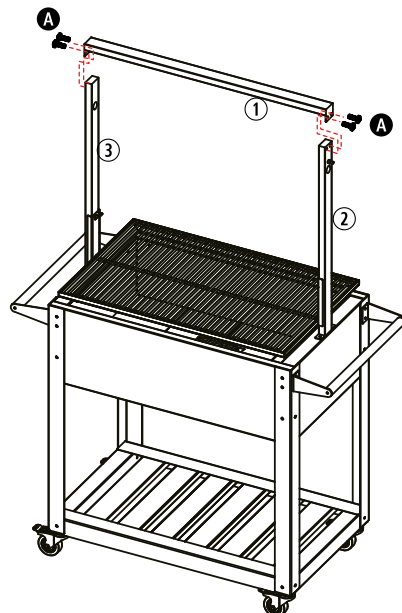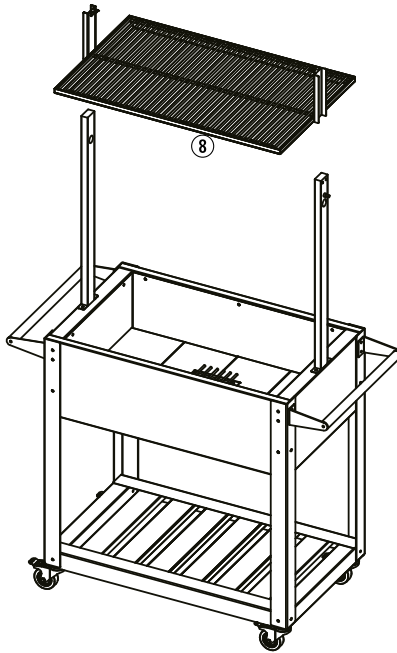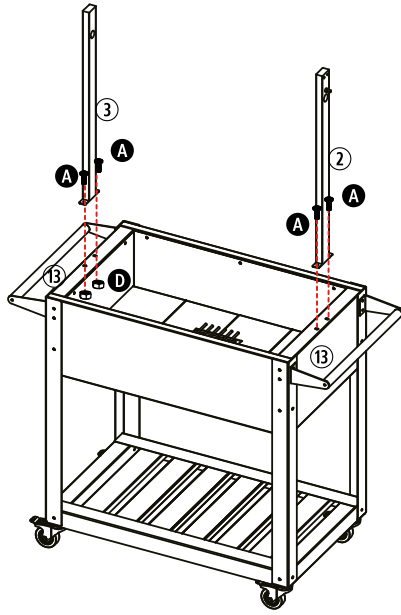   

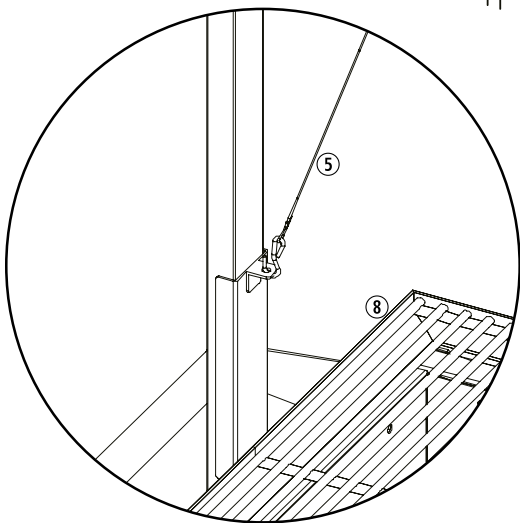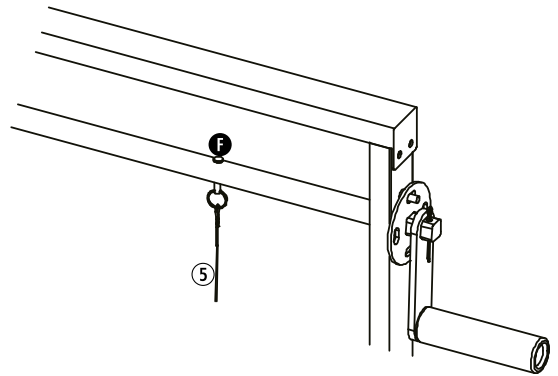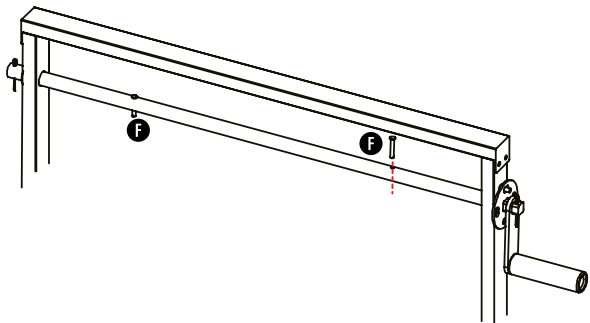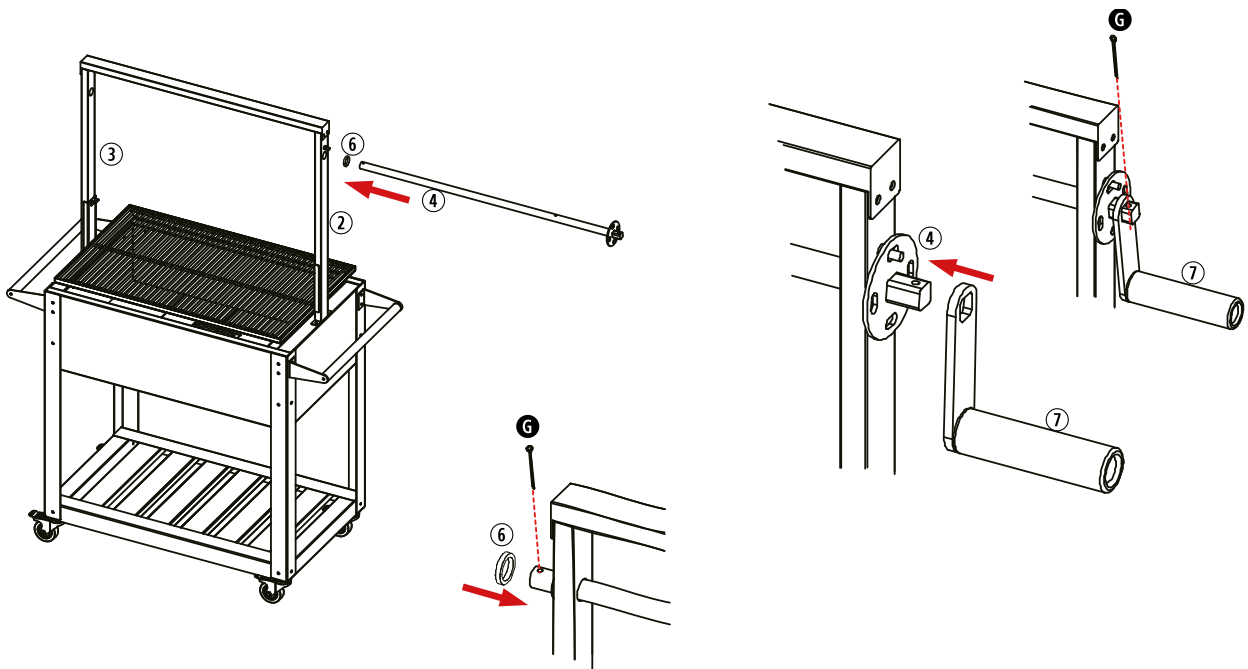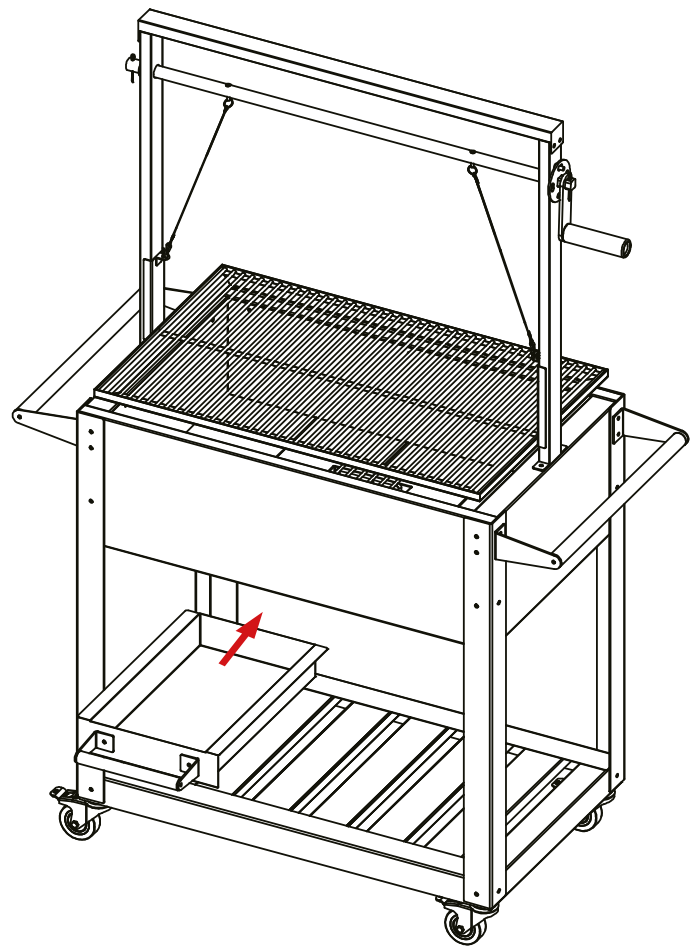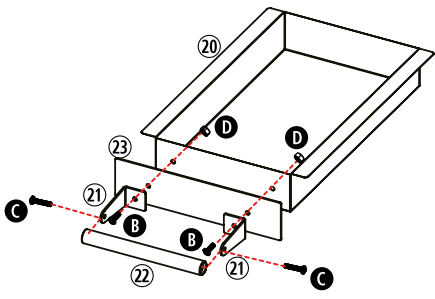      



## **SAFETY INSTRUCTIONS**

**NOT TO BE USED** indoors. Never use a charcoal grill inside buildings, vehicles, or tents. It may result in serious injuries or death.

**NOT TO BE USED** closer than three metres from flammable materials such as wooden structures, hanging tree branches, clothes, or fuel.

**NOT TO BE USED** on an uneven surface.

**NOT TO BE USED** during windy weather.

**DO NOT** light charcoal with gasoline, alcohol, or with any other flammable substance. Please read the manufacturer's instructions for the use of charcoal and lighter fluid carefully before use and follow the instructions.

**DO NOT** add lighter fluid or lighter fluid doused charcoal on hot or warm charcoal.

**DO NOT** wear baggy clothes when lighting or using the grill.

**DO NOT** touch a hot grill without grill gloves.

**DO NOT** move the grill when it is hot.

**DO NOT** leave the grill unsupervised.

**DO NOT** leave children or pets near a hot grill without supervision. **DO**

**NOT** remove the ashes before the charcoal has burned out or cooled completely.

### **IMPORTANT:**

**YOU MUST ENSURE THAT THE MATERIALS AROUND THE GRILL OR UNDER IT DO NOT SUFFER FROM THE HEAT WHEN USING THIS OR ANY OTHER GRILL.**

**DO NOT PUT WATER ON A HOT GRILL. IT CAN DAMAGE THE COATING. CLOSE ALL AIR VENTS TO PUT OUT THE FIRE.**

### **Minimum clearances to combustibles**

**Above the grill:**

Minimum of 4 m to combustible materials. Do not use the grill under any awnings or pergolas.

**Around the grill:** Minimum of 1.5 m to any combustible materials.

**Liquid or gas fuels:**

Minimum of 10 m. Do not store any liquid or gas fuels, cylinders or containers in the vicinity of the grill. Ensure all fuel containers are sealed tight to prevent escaping vapour.

### **WARNING:**

The manufacturer's aim has been to remove all sharp edges, but you should nevertheless handle all parts with caution in order to prevent any possible injuries.

### **LIGHTING**

The grill can be lit by using a chimney starter, paraffin-based firelighters or lighter fluid. Only use vegetable oil-based fluid so that no flavour is imparted to the food. Regardless of the lighting method, always follow the manufacturer's instructions for the product used for lighting.

**WARNING:** Do not use gasoline or spirit for lighting or increasing the flames. Only use lighters that conform to Standard EN 1860-3.

## **WARRANTY**

Normal wear and tear, rusting or corrosion of parts is not covered by the warranty. For example, cracking of ceramic surfaces, discoloration of steel surfaces and the occurrence of rust spots are normal during use and over time and do not affect the use of the barbecue. Nor does the warranty cover parts that are subjected to wear and tear or corrosion during use, such as cast iron and stainless-steel tube burners, heat distribution plates, cooking grates and griddles, and warming racks. In the case of self-assembled barbecues, the customer must always install and replace the parts according to the instructions. Failure to follow these instructions will invalidate the warranty. Always read through the user instructions carefully and follow them. Damage or defects resulting from improper use or neglect of maintenance are not covered by the warranty.

Nor does the warranty apply if the product is used for commercial manufacturing, sale or rental purposes.

If a product or part of the product becomes defective during the warranty period, please contact the importer or the Mustang Support Service via [www.mustang-grill.com](http://www.mustang-grill.com). Before submitting a warranty claim, please re-read the user instructions thoroughly to ensure that you have followed them. All warranty claims will be processed by the importer. A defective or missing part will be replaced with a new part. The customer is responsible for installing the defective or missing part.

The warranty is only valid upon presentation of a copy of the purchase receipt. The purchase receipt must include the name of the seller, the make and model number of the barbecue and the date of purchase. The warranty claim must include the following information: the make and model number of the barbecue, the reason for complaint, the part number of the defective part according to the parts list, a copy of the purchase receipt or statement of place of purchase, date of purchase, consumer's name, telephone number, street address, postal code and city.



# **Hamson®**

**INTERNATIONAL GMBH**

Hamson International GmbH

Ingolstädter Straße 1-3

28219 Bremen, Germany

Tel.: +49 421 380370-0

E-Mail: [info@hamson-bbq.de](mailto:info@hamson-bbq.de)

Website: [hamson-bbq.de](http://hamson-bbq.de)